

crank will start the motor on the upward pull. When the crank is in such position as to show that one piston has reached the compression point, give a sharp, strong pull upward; if the motor has been properly adjusted it will start immediately. It is sometimes necessary depending on weather condition, to prime the carbureter. This is done by pulling up a few times on the plunger or float pin on top of the carbureter. Immediately after starting motor on batteries change switch to other side marked M A G

Control

The control of all Maxwell sliding gear cars is by two hand levers located at the right side of the car and foot levers on foot board, and spark and throttle levers on steering column. The

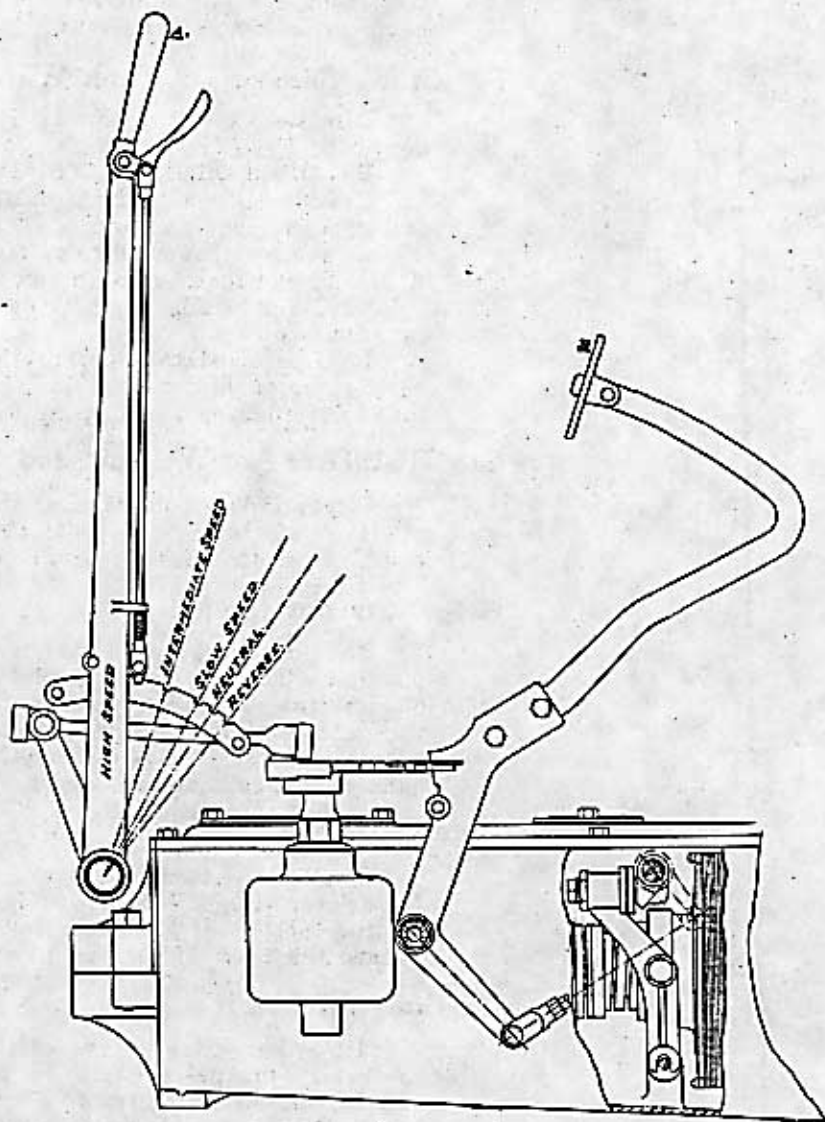


Fig. 1. Maxwell Sliding Gear Control